

# Configuring the Time Server on Linux-based exacqVision Systems

To configure the time server on a Linux-based exacqVision system, complete the following steps:

1. In exacqVision Client, make sure Enable Time Server is not selected on the Date/Time tab on the System Setup page.
2. In a Terminal window, type **sudo /etc/init.d/edvrserver stop** to stop the exacqVision service.
3. In a Terminal window, type **sudo /etc/init.d/ntp start**.
4. Type **sudo /etc/init.d/edvrserver start** to start the exacqVision service.

On the System Setup page, Enable Time Server should now be selected and not greyed out.