 


## M-Series Translations

1. Start LXTerminal.

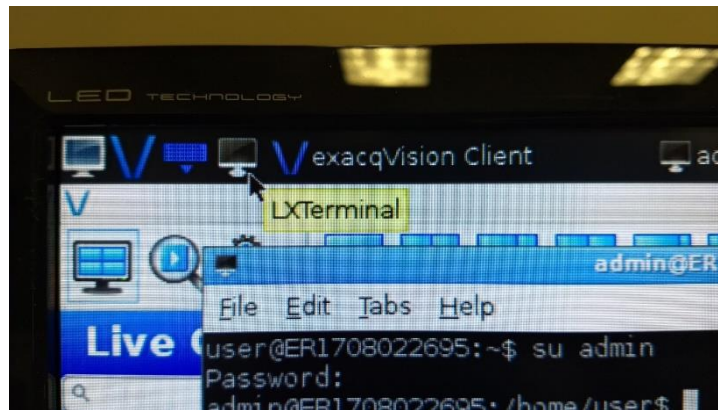

2. Change to admin user.

```
su admin
```

3. Change to the admin home directory.

```
cd
```

4. Download and execute the m-series script from translations server.

```
curl -fsSL https://translate.exacq.com/m-series.sh | sh
```

 
5. Progress messages will scroll as the script executes. The last will be about installing the m-series lang.

### Enable Translations


The process is the same for any language, but this example shows application of Japanese.

1. Open System Settings dialog. Enter the admin password when prompted.


# exacqVision Support Portal

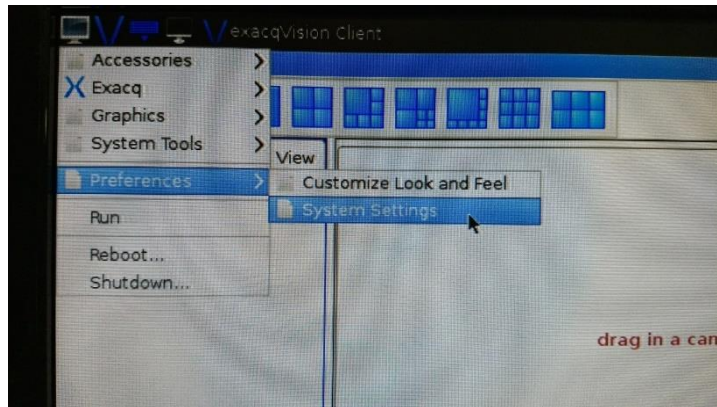

 
2. On the Language and Keyboard tab, press Configure Locale.

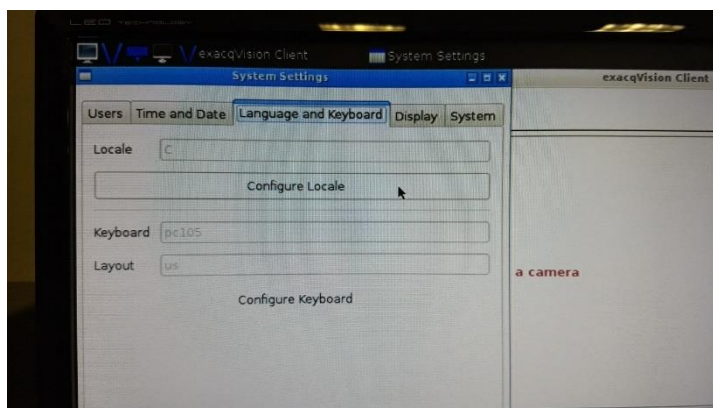

 3. Check ja\_JP.UTF-8 from the list and press Forward.

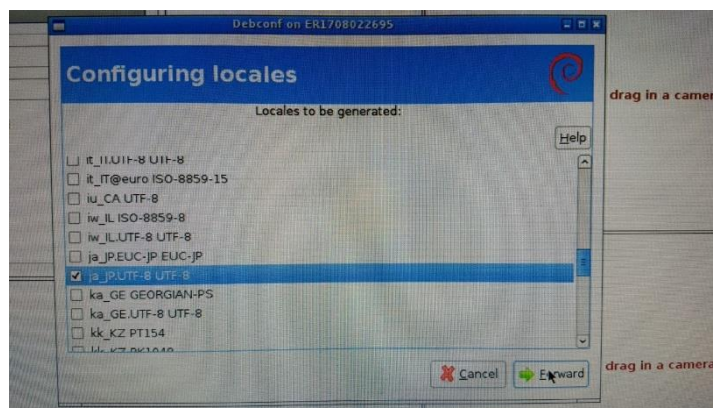

 4. Select ja\_JP.UTF-8 from the drop-down and press Forward.

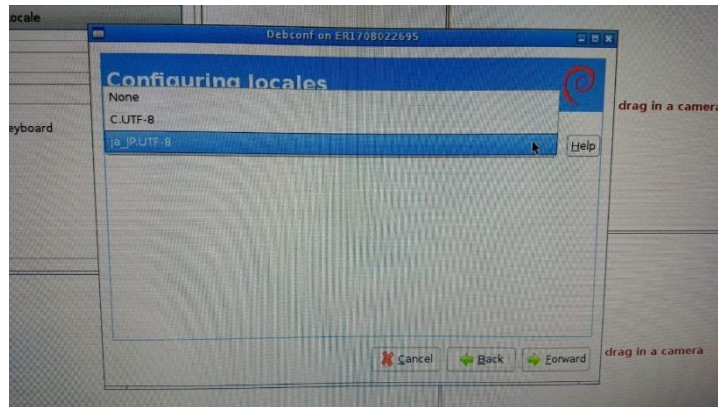

5. Reboot the system. It should boot back up in Japanese.