

# Manually Deleting Log Files from Linux-based exacqVision Systems

It is possible for log files to become large enough to prevent proper access to an exacqVision system. If this happens, complete the following steps to delete the files manually:

1. Restart the system.
2. During the system startup process, press the Esc key to boot to shell.
3. Type ***/usr/local/exacq/server/logs***.
4. Type ***ls -la*** for a list of files and sizes.
5. Type ***less 'filename'*** to see the error.
6. Type ***sudo rm 'filename'***.