


# Assign Door an Unlock Schedule in Entrapass Web

## Description


To program when a door should be not be locked it must be assigned a schedule. You can change the unlock schedule at any time to ensure proper access levels.

## Entrapass Web

1. Navigate to the *Operation* menu and select *Door*

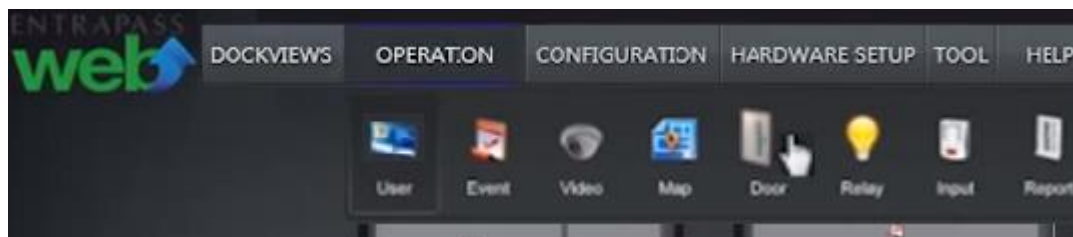


2. Select desired *Site*.

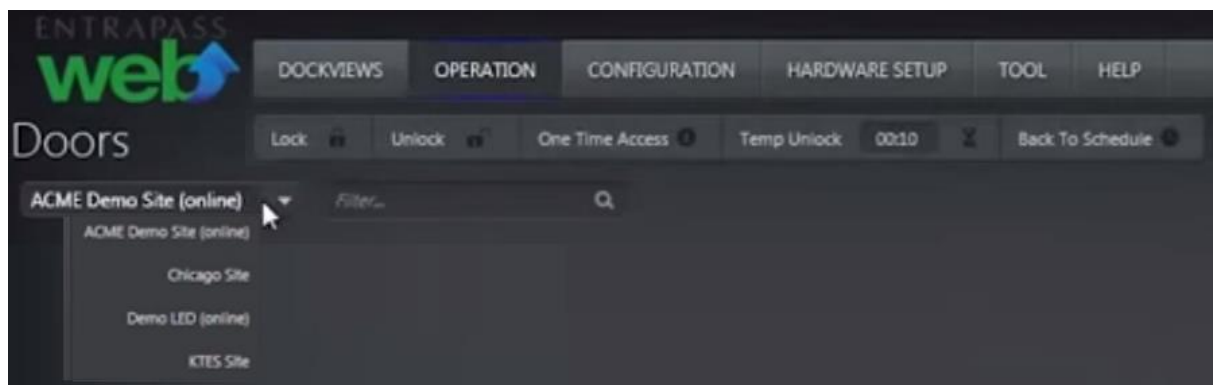

# exacqVision Support Portal

3. Right click door to *Set Unlock Schedule*.

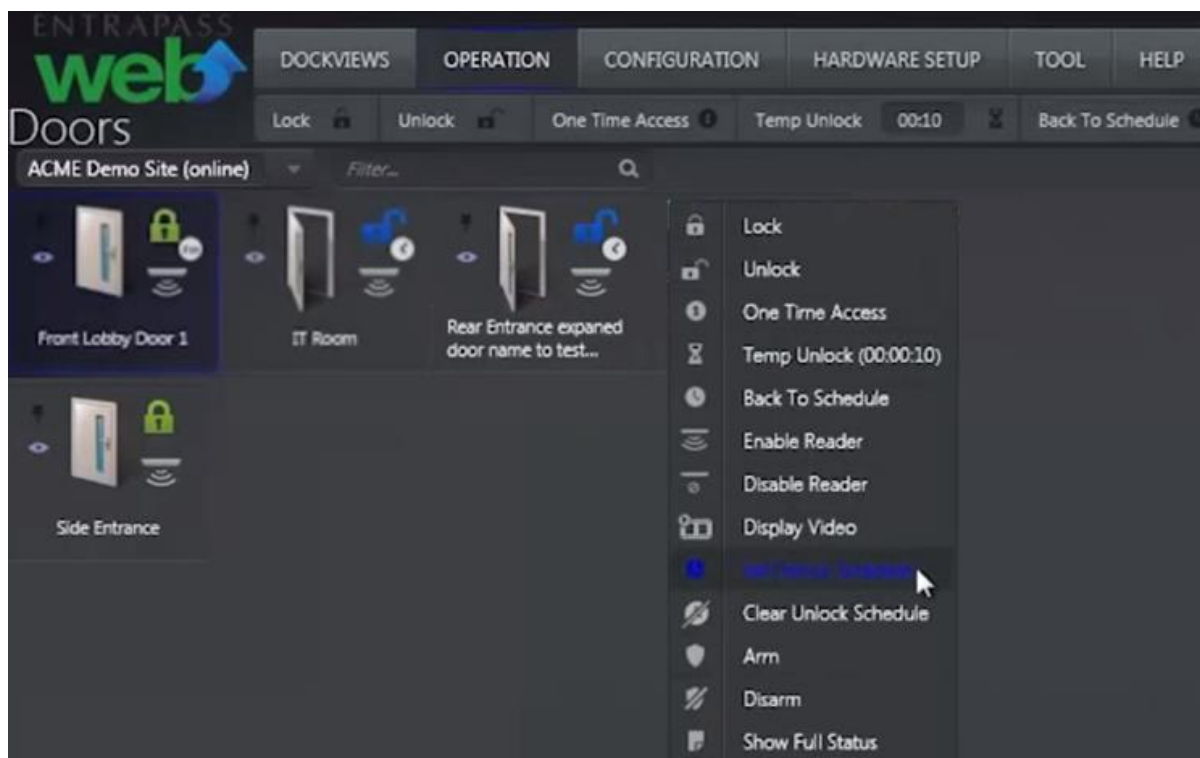

4. Apply desired *Unlock Schedule*.

