



## Camera Time Stamp Off by Years

Some cameras, particularly AXIS and Sony models, display an OSD date with an incorrect year. The time and date of the camera might be set to GMT and the Windows time is correct on the server, yet the OSD on the screen shows something like March 2, 2001.

This is usually a result of European Date Formatting (dd/mm/yy). Set the camera to USA date format (mm/dd/yy) to resolve the issue.