

## Disable or Uninstall exacqVision Web Service


### Description

If you are not using the exacqVision Web Service and for cybersecurity reasons want to disable, you can either uninstall it or disable it from starting.

### How to Disable the Web Service

#### Windows:


Start -> Programs -> exacqVision Web Service -> Set exacqVision Web Service to start manually.

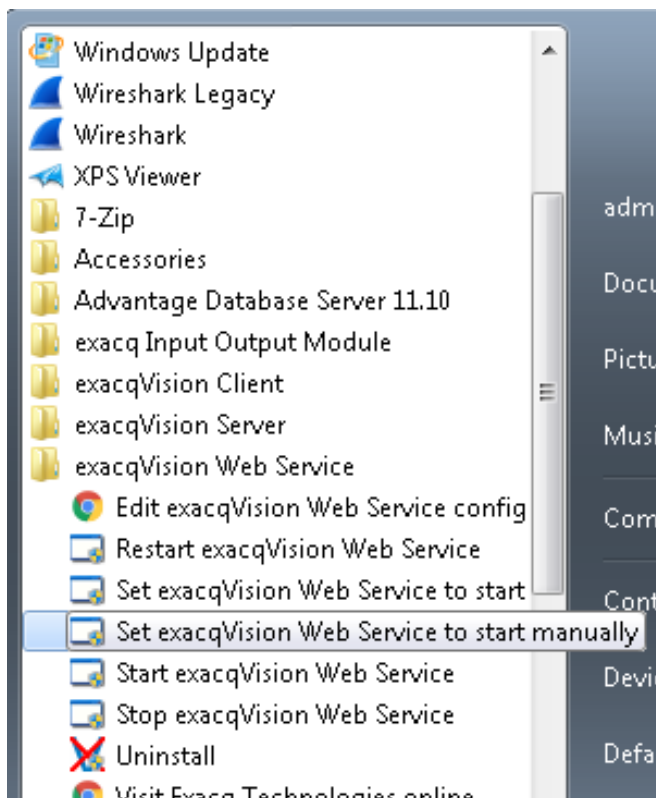


Or

Open Windows Services by going to Start -> Type "services" or "services.msc" in the Start Menu search -> Choose Services

# exacqVision Support Portal

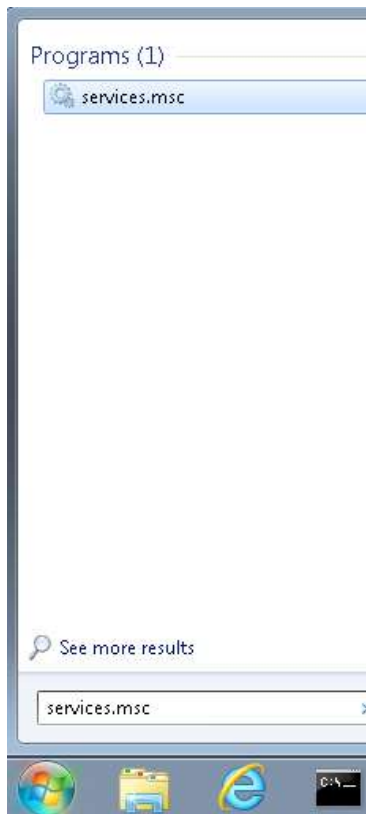

Once Services is open, Find "exacqVision Web Service" -> Double-Click exacqVision Web Service -> change Startup Type: to Manual or Disable -> apply -> OK

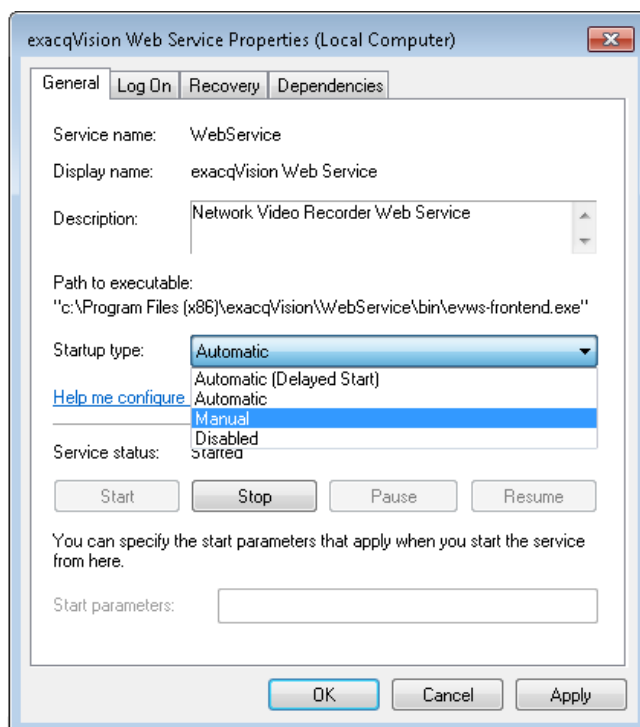


## Linux:

Open a terminal window Applications -> Accessories -> Terminal and type **sudo /usr/local/exacq/web/service/service.sh manual**

## How to Uninstall the Web Service

### Windows:


Start -> Programs -> exacqVision Web Service -> Uninstall

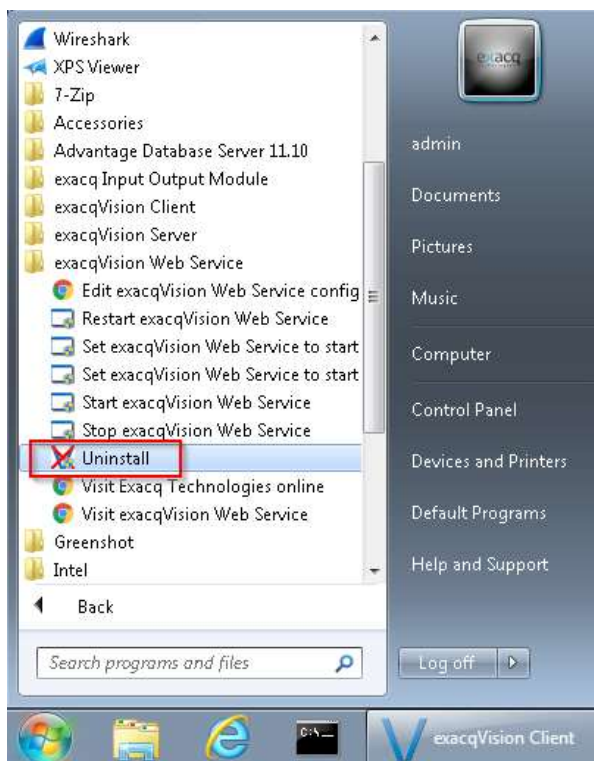

or

Go to Control Panel -> Programs and Features -> Locate and highlight "exacqVision Web Service" -> Choose Uninstall

# exacqVision Support Portal

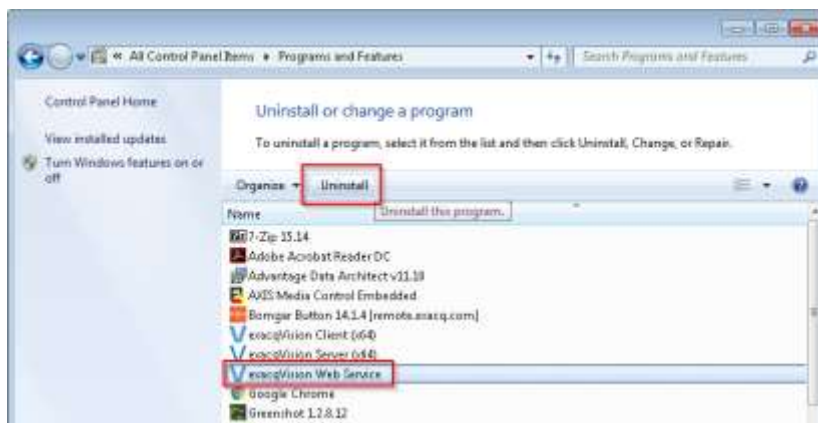

## Linux:

Open a terminal window Applications -> Accessories -> Terminal and type **Sudo dpkg --remove webservice**