

Disabling a Drive via XML (Windows)

To disable a drive in a Windows exacqVision Server via XML, complete the following steps:

1. Before editing any configuration files directly, stop your exacqVision Server. Open Control Panel and then the Administrative tools (you might have to select Classic View to see the option).
2. Open the Services link and find exacqVision Server. Right-click and select Stop.
3. Browse to the C:\Program Files\exacqVision\Server directory.
4. Right-click on the psfpi.xml file and select Open With.
5. Select Notepad or Wordpad from the list. The file will list your drives in text form.
6. Find the drive that you need to disable and change the Enabled="1" to Enabled="0".
7. Save the file and close the editor.
8. Restart exacqVision Server.