

Enabling Arecont Extended Motion Detection on exacqVision Systems

Some Arecont IP cameras have an Extended Motion Detection feature that offers more granularity to the motion-detection grid. This feature is supported in exacqVision Server version 4.7.1.27101 and later.

To enable the feature for use with exacqVision systems, complete the following steps:

1. Open the camera's configuration web page.
2. Open the Motion_detector window.
3. Select Enable Extended Motion Detection and Enable Motion Detector.
4. Open the Administration window.
5. Click Save All Settings to Flash.
6. In exacqVision Client, open the IP Cameras page of the server that the camera is connected to.
7. In the IP Camera List, disconnect and reconnect the camera.

Arecont Camera without Extended Motion Detection



Arecont Camera with Extended Motion Detection

exacqVision Support Portal

