

1 Requirements

The Sureview Immix integration works with any exacqVision system. This document assumes that the exacqVision server and the Sureview Immix server are both installed and running.

Minimum software requirements:

- exacqVision version 4.2 or later
- Immix version 18.0.0.21 or later

2 Configuration

1. Obtain the IP address of the exacqVision server.
2. On the exacqVision server, create a username and password with Power User privileges. Immix software will log in to the exacqVision server with this account to request video and actuate soft triggers.
3. Use the exacqVision–Immix integration document at <http://sureviewsystems.zendesk.com/entries/20140827-exacq> to configure the Immix software for use with the exacqVision system.
4. You will now be able to use the Immix software to view live or recorded video and perform alarm events on any imported exacqVision camera in the Immix system.
5. The Immix software will send a soft trigger to the exacqVision system to record video based on the alarm events that are configured. (See “Event Linking in the exacqVision Users Manual for information on configuring soft triggers.)

The following illustration shows the Immix software running on an exacqVision camera.

