



Installing your Exacq x64 Solid State Drive

- Export your Exacq license and config file
 - Open the Exacq client and navigate to the system section
 - Export the files to a thumb drive. You will need these files to import to your new system.


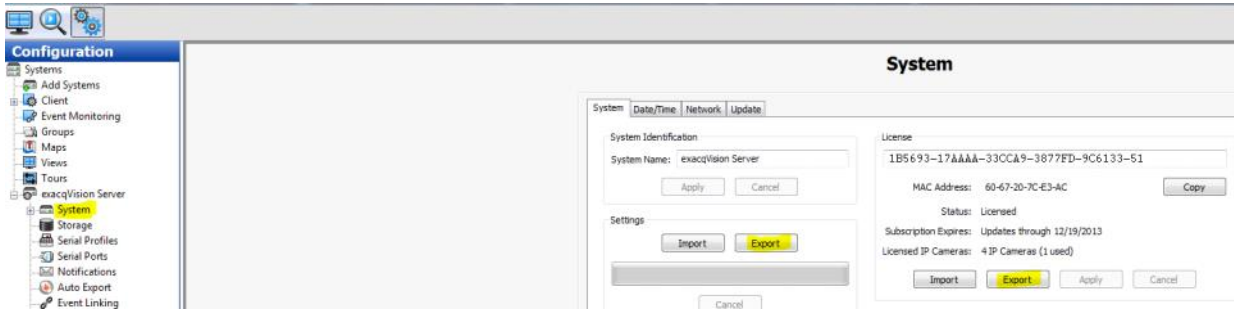


- Power off your system and remove power
- Remove the Exacq server cover to gain access to your hardware
 - There should be 1 screw per side and one on the backside
- Remove the existing SSD drive
 - Remove the 2 screws circled in red
 - Clip wire ties as needed
 - Remove Sata and power connector

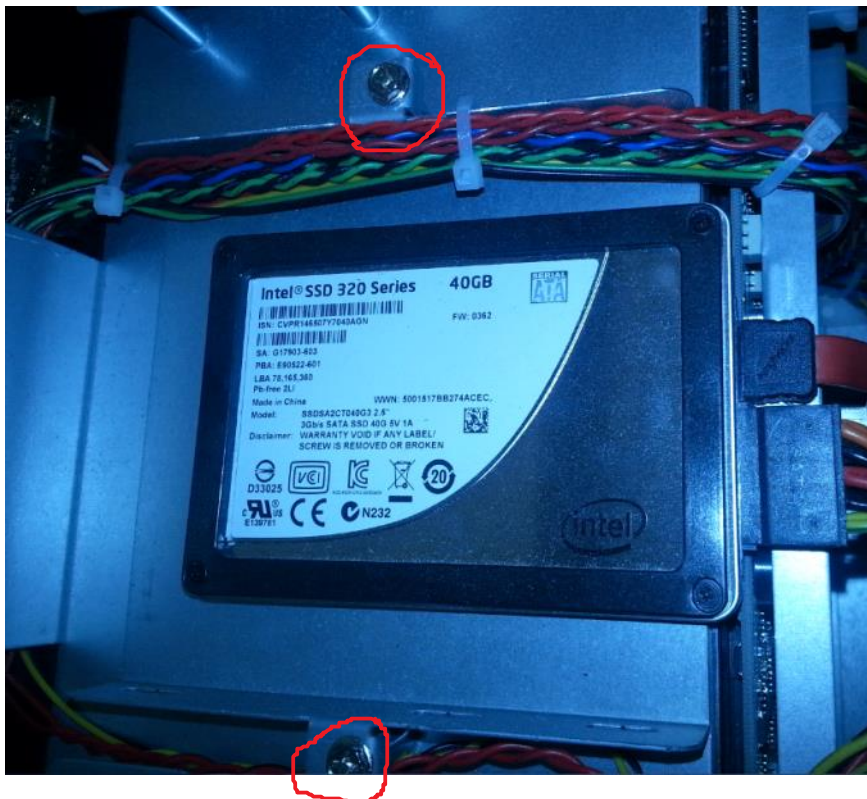



- Add new drive to mounting tray

- Remove the old SSD from the mount tray by removing the 4 screws on the bottom
- Place the new SSD on the mounting tray and re-apply the 4 mounting screws
- Place newly mounted SSD drive back in server
- Fasten down the mounted SSD with the 2 mounting screws (circled in red in picture above)
- Re-apply the power and Sata connectors
- Re-wire tie cables if needed

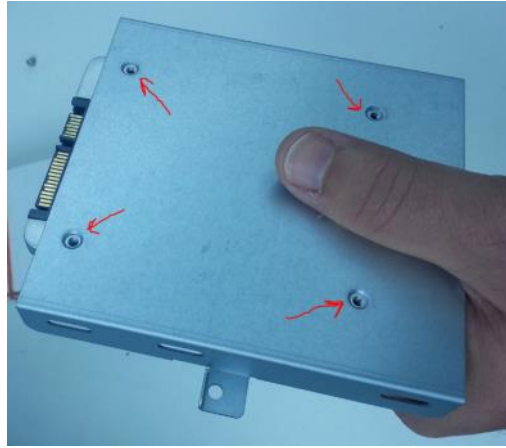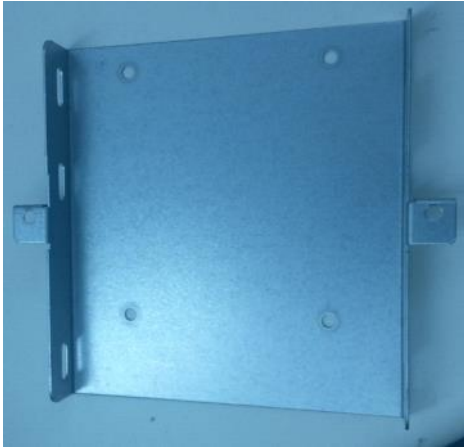


- Place the cover back on the Exacq server
- Secure the cover with screws
- Plug the server back in and power on
- Login to the Admin account
- Place the ExacqVision recovery CD that came with your new SSD in the CD drive
 - Click on Windows Start menu> Computer> Right click on your CD drive and choose "Open"
 - Navigate to \Recovery\ Maintenance
 - Right-click on "BoardPrep.bat" and select Run as Administrator
 - Confirm board type and installation by pressing "y"
 - Reboot system after installation completes.

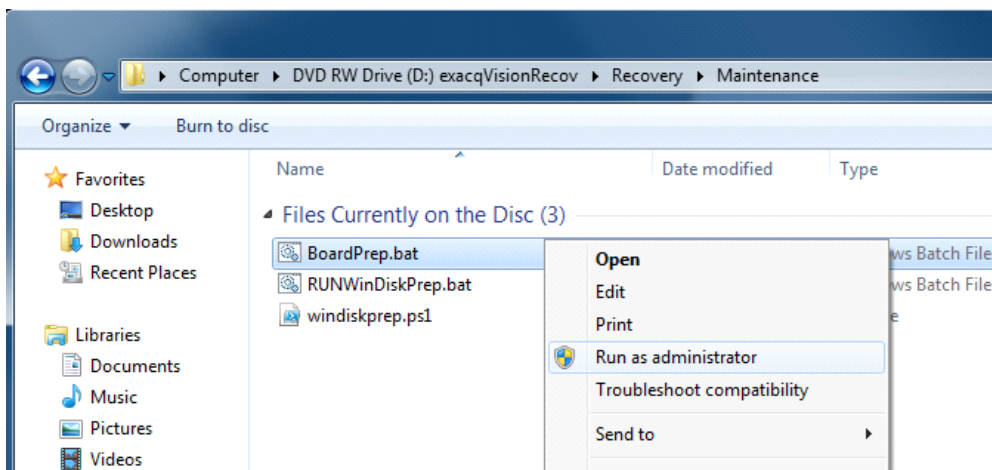

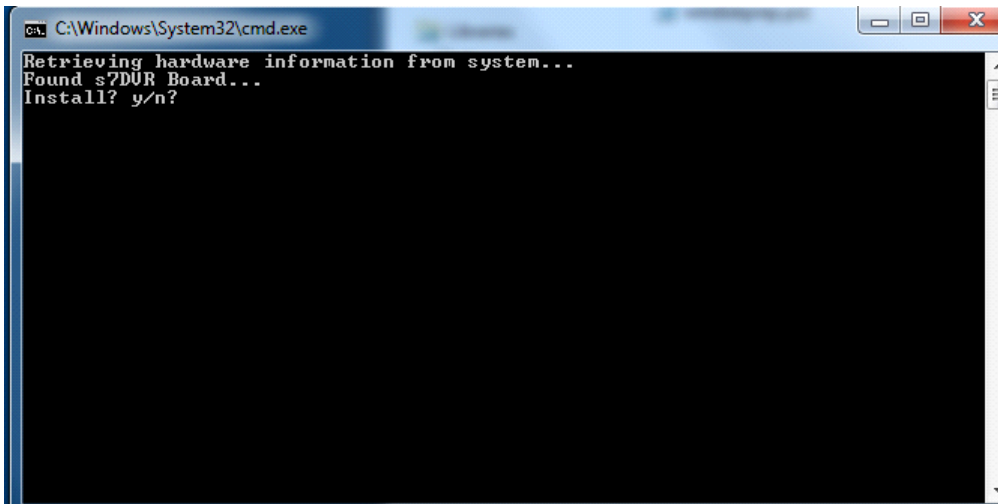
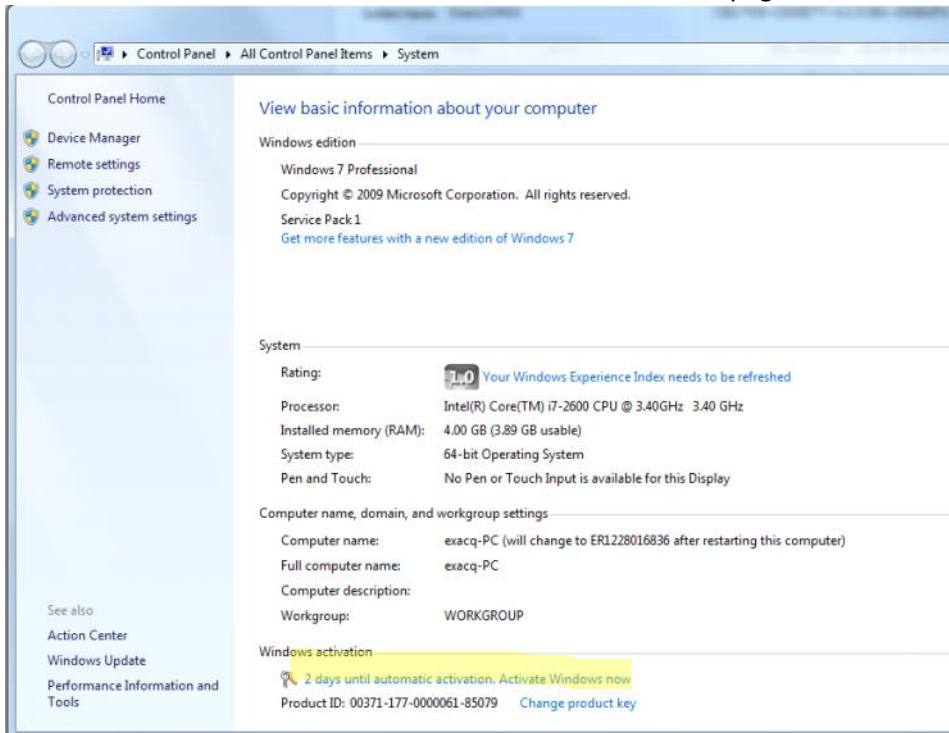


- Run 'evSysPrep'
 - Run the 'exacqVisionSystemSetup' program from the \Recovery\Exacq folder.
 - Enter in the Chassis Serial Number from the sticker on the side of the box. It will begin with "ER".
 - Click "Configure System" and then restart the exacqVision system.

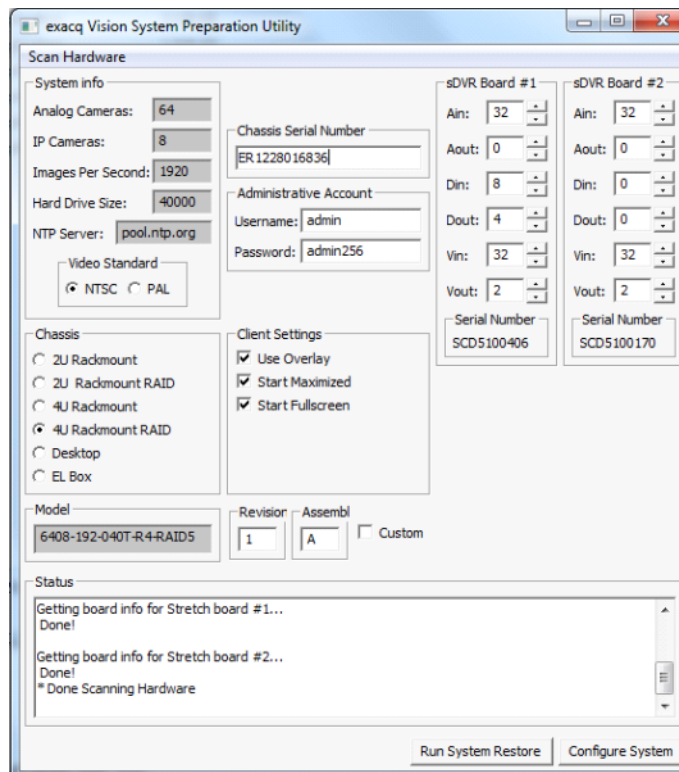

- Install exacqVision Software
 - Run 'RUNME.exe' from the CD.
 - Click the 'Install exacqVision Server Software'. This will install the exacqVision Client, Server, and Web Service.
- Import Exacq license and configuration
 - Open the Exacq client
 - Navigate back to the system page where we exported earlier
 - Choose import under the License section

- Navigate to where you saved your license file
- Choose import under the settings section
- Navigate to where you saved your settings file
- Activate Windows
 - Go to the Windows Start menu 
 - Right click on "computer" and choose "properties"
 - Choose "Activate Windows Now" at the bottom of the page and follow steps



- Congratulations you have restored your exacqVision Windows system!