

Motion Frames Out of Order on Bosch Cameras

If you see motion images from a Bosch camera that appear to be out of order, the issue can often be resolved by selecting a different setting for the camera's GOP Structure. To change the setting, complete the following steps:

1. Open the camera's web configuration page by entering its IP address in an Internet browser.
2. Open the Settings page and select Advanced Mode in the menu on the left.
3. Select the Cameras entry and then Encoder Profile.
4. Click the Expert Settings button to reveal additional options, including GOP Structure.
5. Make sure IP (which stands for I Frames, B Frames, and P Frames) is selected in the GOP Structure drop-down list.
6. Click Set to enable the selected settings.

