

Replacing XDVR drivers with SDVR drivers on Linux-based exacqVision Systems

If you have an Linux-based exacqVision system (such as exacqVision EL) that requires SDVR drivers, but you mistakenly installed XDVR drivers, you must remove the XDVR drivers before installing the SDVR drivers. There are two equal ways to remove the XDVR drivers; use the one that you prefer or have better access to:

1. In Terminal, type `sudo apt-get purge xdvapi` .
2. In Synaptic Package Manager, search for `xdvapi`, right-click its entry, and select **Completely Remove**.

Now you can proceed with installing the SDVR drivers.