Using IQeye Input Triggers

When a digital input is triggered on an IQeye camera, the camera transmits a single alarm to indicate the condition. This means that the triggered state cannot be seen on exacqVision Client's Trigger Input page. To test IQeye digital inputs, you must use them with Event Linking or Event Monitoring.

