


Installing Windows Security Essentials on Win7 based evServers

Steps:

1. Stop exacqvision Server Service (Control Panel -> Administrative Tools -> Services -> exacqVision Server : Stop)
2. Download Windows Security Essentials Package (mseinstall.exe, x64) from Microsoft website, and execute the installer on the target machine.
3. Select all default options, except for the ones listed below.
 - a. Do not join the program (Optional)



- b. Unselect both options below:

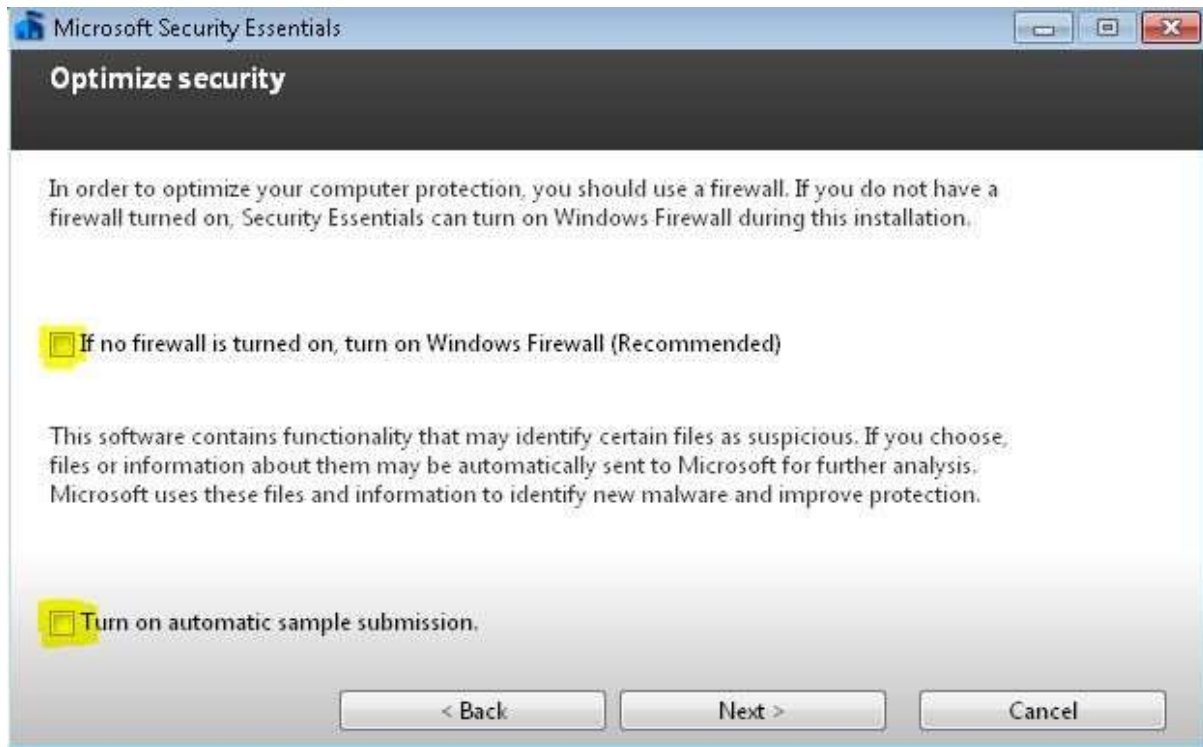


c. Do not immediately scan




d. The system will update automatically (if connected to the internet) and come to the following page:

exacqVision Support Portal

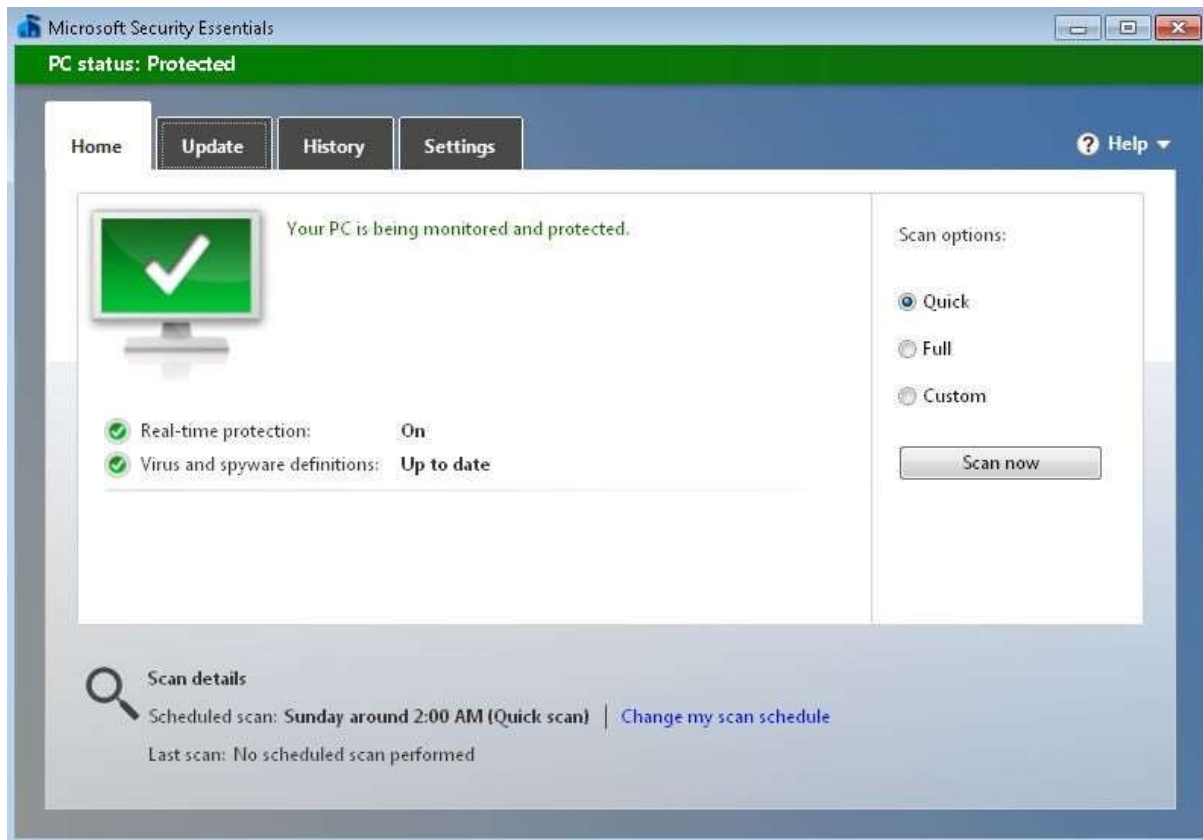


- e. If Internet was not accessible, connect to the internet, and update definitions. Make sure the system shows the latest definitions are installed.

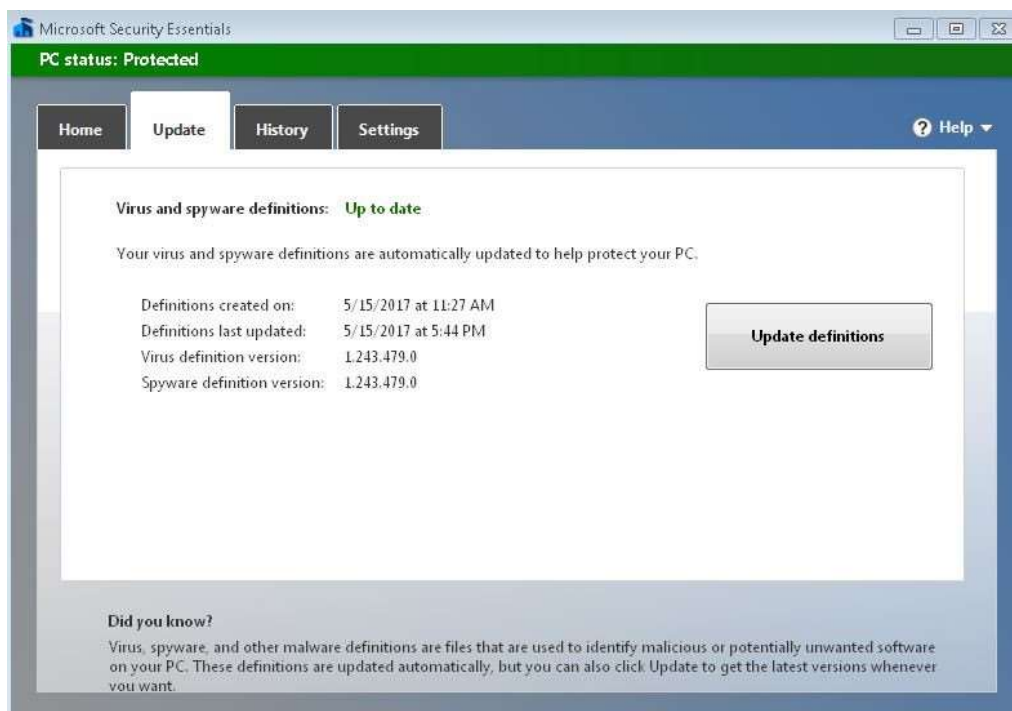


exacqVision Support Portal


- f. On the settings page, schedule a daily scan to a time of your convenience.

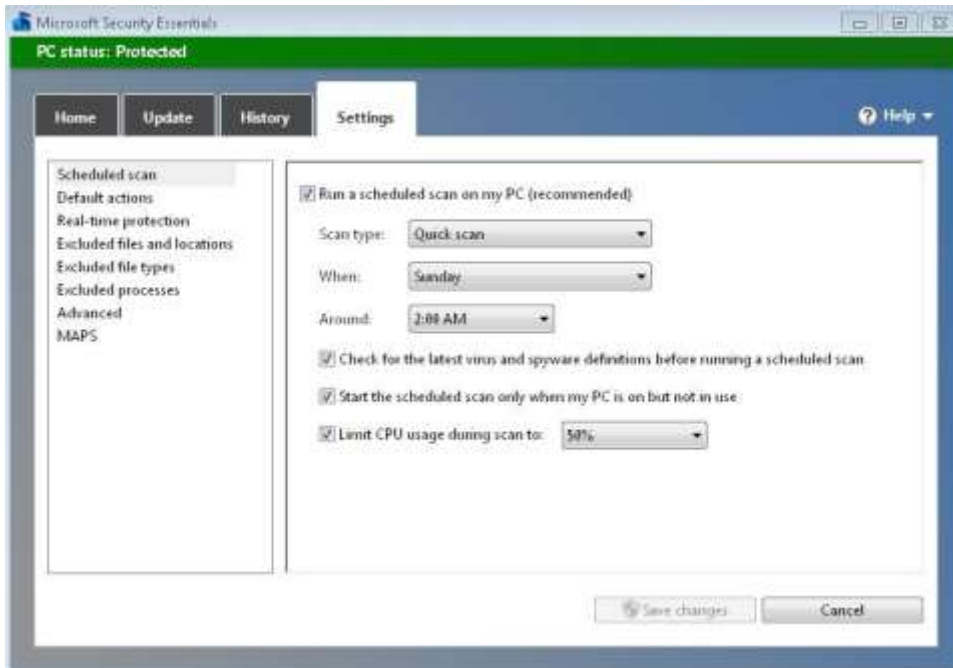


- g. Click on 'Exclude Files and Locations', and hit Browse.

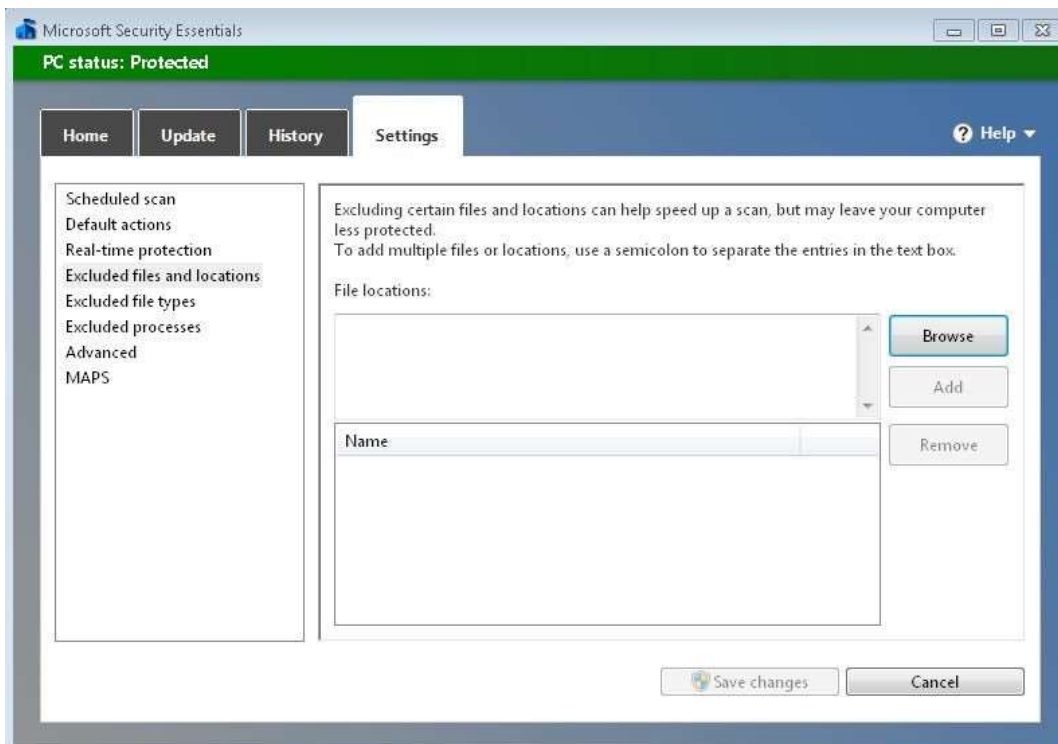


- h. Select all the Data Drives (on which Video is stored) and choose the exacq install location (C:\Program Files\exacqVision), and hit OK.

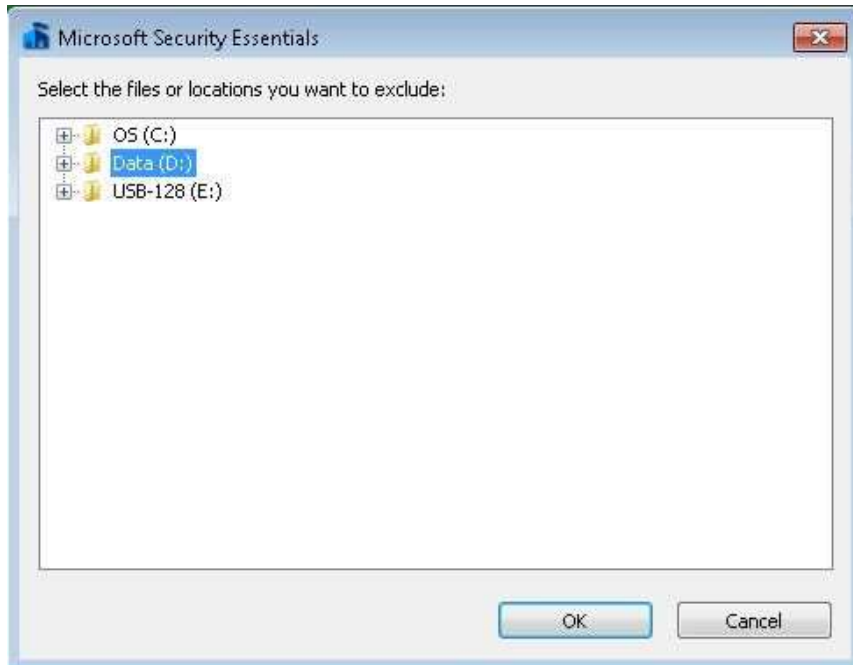

- i. All Data drives and the exacq install directory should be shown, separated with a semi-colon.

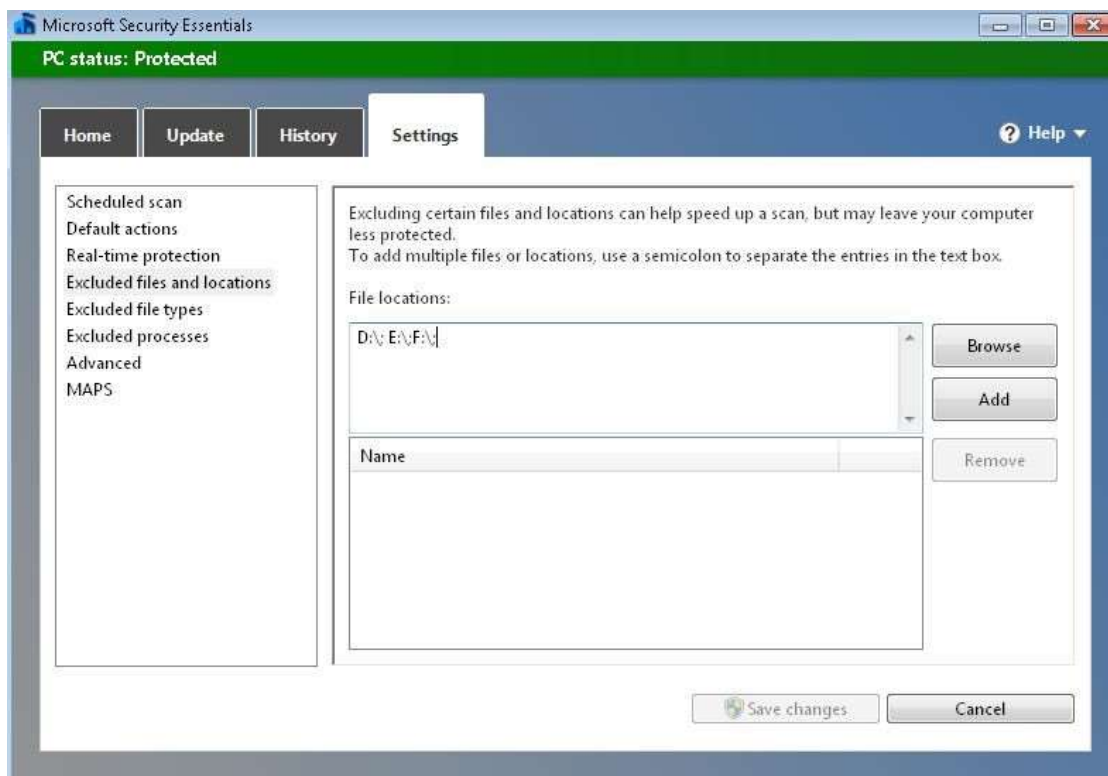

- j. Hit 'Add', and all the data drives and the exacq install directory should be on the excluded list.

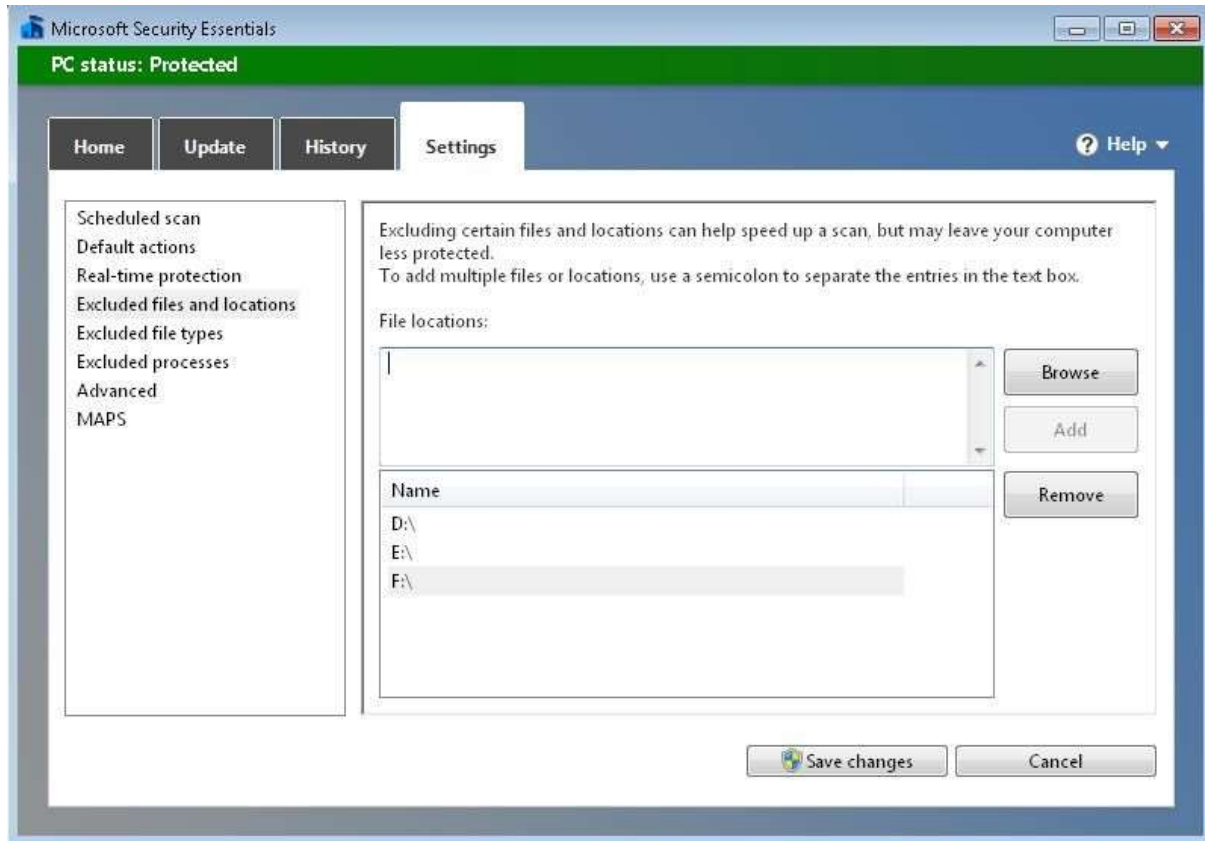

- k. Come back to Home page and run a full scan.

exacqVision Support Portal

